 


Vacuum Cleaner Instruction Manual

CRS2870/CRS2890

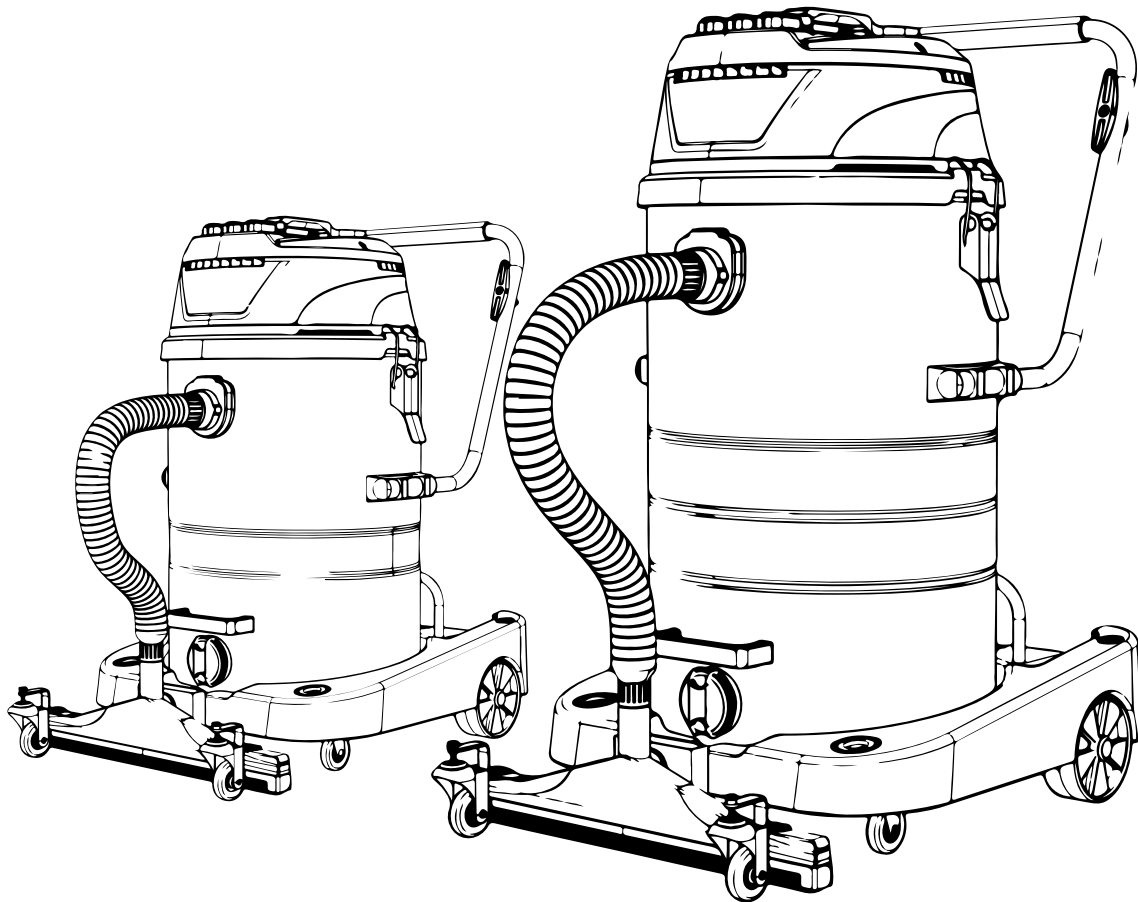

Do not use this device without reading this manual.



12/2023

Thank you for purchasing our products.

In order to ensure your safety and also satisfactory user's experience, please read this manual and safety rules carefully before use.

Precautions before use

1. Please do not use the vacuum cleaner near flammable liquids or gases to avoid fire.
2. When plugging or unplugging the machine, please turn off the power switch in advance to avoid electric shock.
3. Please do not touch the power plug with wet hands to prevent electric shock. (Do not use on power supply above 220V)

Serious warning!

1. Please do not leave metal objects such as tacks in the hose and the extension part to avoid hose or filter bag damage. Do not suck hair balls, large paper balls and other objects, otherwise the hose may be easily blocked. If there is any blockage, please clean it in time.
2. To avoid the risk of fire or electric shock, do not suck tiny particles such as blades, fire, cement, gypsum powder into the machine when cleaning.
3. Please use an exclusive power strip. Multiple electrical appliances on one power strip at the same time may cause a fire.
4. When the machine will not be in use for a long time, unplug the machine. Please do not leave it when the power is on.
5. Please do not leave the power cord and main unit of the vacuum cleaner around heat sources such as electric heaters to avoid a fire or deformation of the unit. Do not use damaged power supplies and plugs. If damaged, please replace it at a designated repair station.
6. Please do not continue to use the machine for a long time when the suction port or the exhaust port is blocked, otherwise it will cause machine deformation or damage.
7. Please do not let children use the vacuum cleaner and accessories as toys to prevent accidents.
8. During use, the hose and machine body may generate static electricity, so please be careful.
9. During use, if there is any abnormal noise or the suction port has no suction power, please stop the machine and clean it in time.
10. Please read this instruction manual carefully before use. Please take out the corresponding accessories in the bucket before vacuuming or water-absorbing. Please place the dust filter when vacuuming. Please take out the filter when sucking water.

Danger!



1. Non-professionals are not allowed to start the machine for maintenance.
2. Please do not bend, trample, or pull the hose. If the hose is damaged, do not continue to use it. Do not put heavy objects or sharp objects on the machine.
3. Please do not put the power cord between the door gap or use the power cord to lift the vacuum cleaner to prevent damage.
4. When there is too much garbage in the barrel, please clean it in time.
5. When clearing up the wire, please pay attention to the plug to avoid damaging surrounding items.
6. Please pay attention to your own safety and keep all parts of your body away from vacuum cleaners or moving parts.

Recommended use, maintenance, and cleaning methods.

1. To extend the service life of the vacuum cleaner, it is not recommended to use it continuously for more than 30 minutes.
2. In order not to affect the service life of the vacuum cleaner, it is recommended to promptly clean the dust in the barrel after each use.
3. Please wipe the surface with a dry cloth instead of a wet cloth to prevent water from entering the vacuum cleaner and causing a short circuit or even burning the machine.

Chapter 1 How to install the vacuum cleaner.

1. Connect the hose to the vacuum cleaner

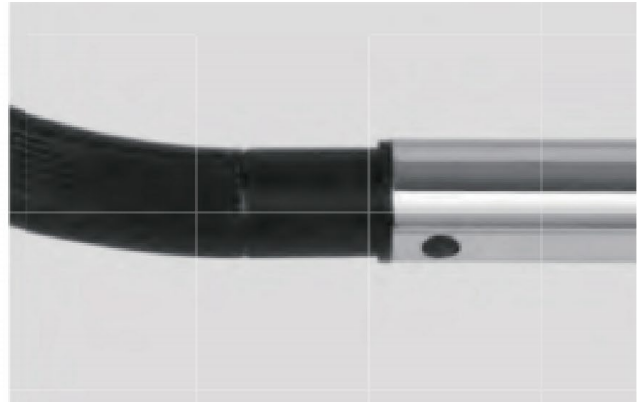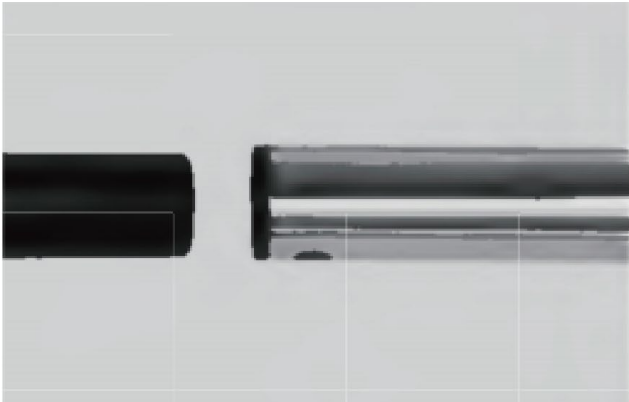

Connection: Insert the handle of the hose into the inner diameter of the pipe, and then tighten it in the clockwise direction.

Removing: Hold the interface and the handle with both hands, then pull it out in reverse direction.

2. Extension hose



3. Connect the hose to the floor brush



Connection: (As shown in Figure 1) Insert the other end of the pipe into the inner diameter of the floor brush interface and tighten it clockwise.

Removing: (As shown in Figure 2) Hold the floor brush and pipe of the interface with both hands and apply force counterclockwise to pull it out.

4. Universal wheel

Align the universal wheel with the installation place of the base and press it firmly.



5. Rear wheel

Step 1. Place the rear wheel assembly on the base and align the screw holes of the rear wheel axle with the base.

Step 2. Use the screws to fix the wheel axle and tighten it firmly with a screwdriver.



6. Upgraded floor brush



Step 1. Take out the front wheel of the floor brush and the fixing screw, then use a screwdriver to tighten the two front wheel assemblies (Figure 1, Figure 2)

Step 2. Take the sticking piece and fix it on the base with 4 screws (Figure 3, Figure 4)

Step 3. Install the floor brush assembly to the sticking piece and tighten it with knobs (Figure 5, Figure 6)

Step 4. Take the floor brush connecting hose, connect one end of the hose to the air inlet of the barrel, and the other end to the floor brush port (Figure 7, Figure 8).

7. Power on and off

Powering on: After the power cord is inserted into the socket, press the switch button firmly to the "1" position to turn on the vacuum cleaner.

Shutting down: Press the switch button firmly to the "0" position to turn off the vacuum cleaner.

Chapter 3 How to use different accessories

Hair brush	Mainly used for vacuuming carpets, wooden floors, marble floors, tile floors, etc.
Leather brush	Mainly used to absorb water on floors, carpets, marble, and tile floors
Flat nozzle	Mainly used for vacuuming furniture edges, picture frames, books, and other irregular objects
Sofa squeegee	Mainly used for vacuuming sofas, mattresses, and other things.

Chapter 4 Troubleshooting

Fault	Possible cause	Solution
Motor does not rotate	1. Check whether the power plug is tightened?	1. Reinsert the plug into the socket
	2. Check whether the power socket has power?	2. Make sure the power socket has power
	3. Check whether the power switch of the device is turned on?	3. Turn on the switch
Weaker suction power	1. Check whether the floor brush and extension hose are blocked?	1. Remove the blockage
	2. Check whether the dust filter bag is full?	2. Clean the filter
	3. Check whether the filter is clogged?	3. Clean the filter
Overheat of machine body or gas discharged	1. Is the suction power normal?	1. Discharge hot air from the machine (this is caused by the heat generated by the motor's heat conduction. The temperature is normal, you can continue to use it)
	2. Is it used for more than 20 minutes?	2. Please stop the machine and rest for 20 minutes before using it again.

Warranty Card			
Name		Tell	
Postal address		Bill No.	
Purchase time		Number	
Product model		Date	
Replace accessories			
Fault description			

