
Single wiping machine

OPERATION INSTRUCTIONS


DC1517

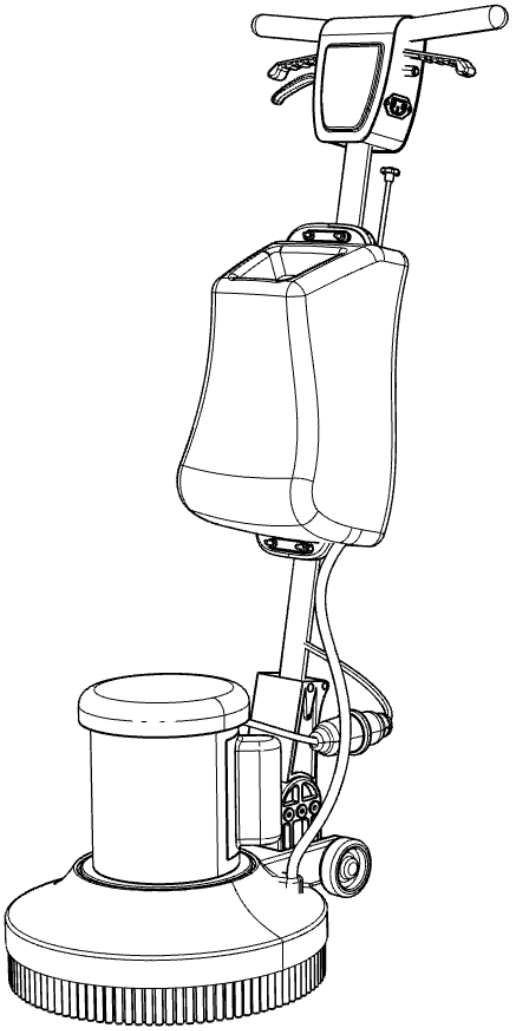


03/2024

Do not use this device without reading this manual.

Chapter 1 Equipment Overview

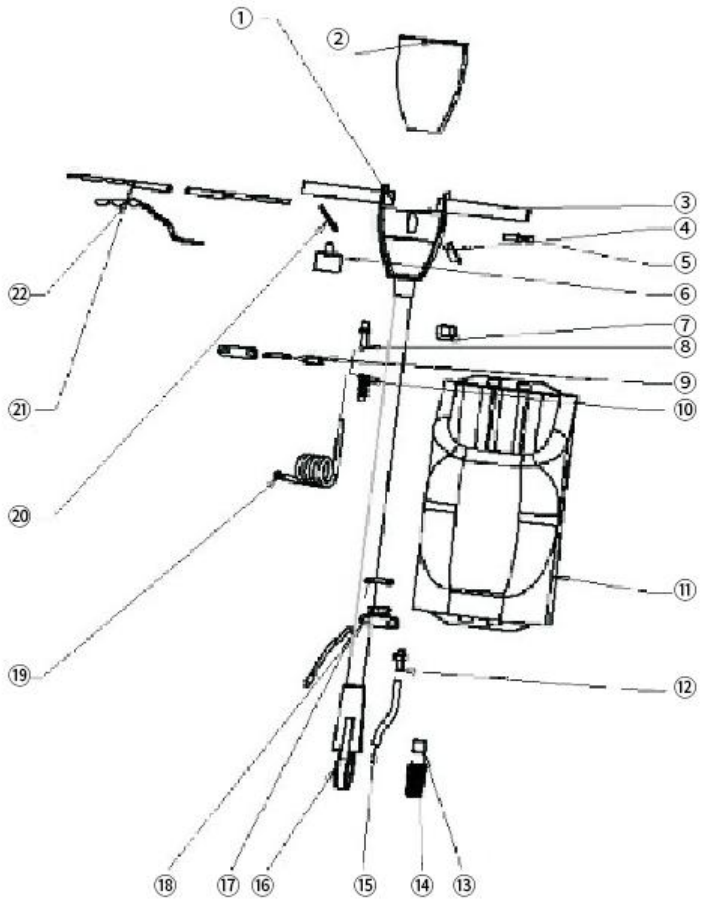

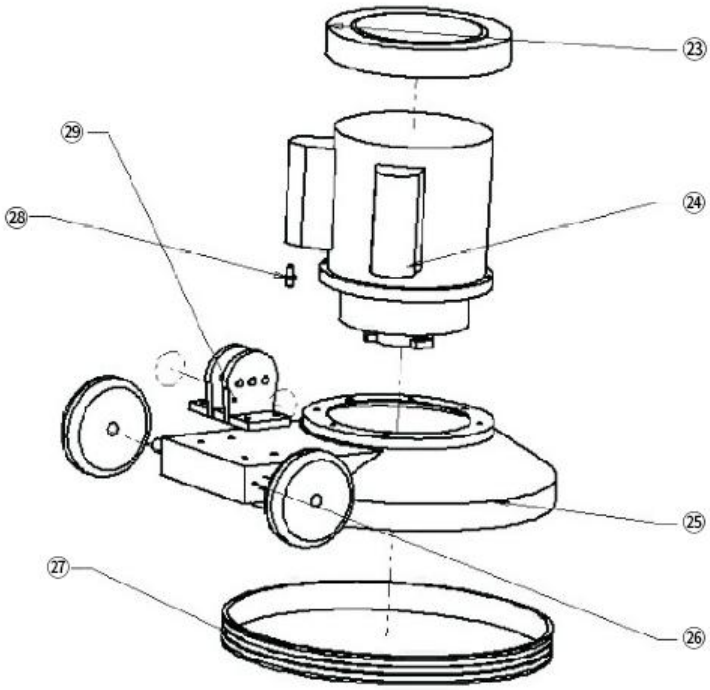

No.	Name	No.	Name
1	Handle	16	Put the water hose
2	Handle shell	17	Power leads
3	Handle holder	18	Water tank positioning piece
4	Switch pressing	19	Power cord
5	Insurance	20	Switch plate spring
6	Switch	21	Switch system
7	Water tank switch	22	Angler handle
8	Power cord lock	23	Motor cover
9	U-bolt	24	Motor
10	Power cord sheath	25	Mainframe cover
11	Water tank	26	Wheels
12	Water outlet valve	27	Anti-collision strip
13	Adjust the gear	28	Water inlet
14	Gears	29	Handle bracket
15	Outlet pipe	30	Put the water hose

Chapter 2 Technical parameter

No.	Name	Parameter
1	Category Voltage(V)	220
2	Power(w)	1500
3	Frequency(HZ)	50
4	Chassis diameter(inch)	17
5	Speed(r/min)	175
6	Noise(db)	≤60
7	Weight(kg)	42
8	Power cable(m)	12

Chapter 3 Installation

Step 1 Install the cleaning brush(pad)

Vertical operation lever, put the brush machine upside down on the ground， select a suitable cleaning brush(or cleaning pad) according to the cleaning needs, rotate it counterclockwise and install it on the motor chuck.

Step 2 Install the water tank

Put the brush machine on the ground, keep the joystick vertical, loosen the upper and lower fixing buckles of the water tank, install the water tank, and adjust the position of the water tank on the operating lever. After fixing the water tank,put one end of the plastic pipe on the water outlet of the water tank,and insert the other end into the water inlet of the brush chassis

Step 3 Adjust the lever

When the brush machine is on the normal ground,loosen the locking clip operating lever,tum the operating lever handle, and adjust the operating lever to a suitable working position to ensure that the waist can be straight and the arms are slightly bent during operation, and then

the locking clip operating lever is locked.swing the operating lever up and down by hand to check whether the operating lever has been locked

Step 4 Fill with water(detergent)

Fill the water tank with an appropriate amount of water and detergent according to the cleaning needs.The surface of the water or detergent solution added to the water tank should be kept at least 5cm away from the water tank mouth,so as to avoid overflowing the water tank when the machine is running.

Step 5 Wiring

Connect the power lead of the main unit to the power coupler of the joystick, untie the power cord of the joystick,confirm that the high voltage of the power supply is the same as the rated voltage of the machine, and then connect the power cord to the power socket

Step 6 Start

The start switch of this machine adopts the design that the left and right sides witches can be controlled For safety reasons,the start switch must be used with the safety switch.When using the safety switch, push the safety switch inward to the end and press the start switch at the same time.Release the safety switch again.

Step 7 Direction Control

After the flashing machine is started,as long as the operating lever is gently pushed up or down,the flashing machine will automatically move to the right or left When the lever is pushed down,it increases the pressure behind the brush or pin,which moves the brush to the left,and when the lever is pushed up,it increases the pressure in front of the brush or pin,which moves the brush to the right.

Step 8 control the water output

When water or detergent is needed in the cleaning process,the switch of the water tank can be rotated,and the water or detergent can be discharged from the water tank.Rotate the switch of the water tank in the opposite direction to stop the water outlet.

Step9 After the work

After the work,unplug the power first,then drain the unused water or detergent in the water

tank out of the water tank, and rinse the water tank with clean water:remove the cleaning brush(pad)and clean it.

Safety Rules and Precautions

Before using this machine,please read this manual carefully to ensure that the machine can be used correctly.

Before connecting the power cord, please check whether the power supply voltage is consistent with the voltage marked on the nameplate of the machine.Only when the two are consistent can it be used,after use, cut off the power supply and wrap the power cord

Before use,check the power cord to make sure that the power cord is not damaged before use,if the power cord is damaged or the appliance fails, it must be replaced or repaired by the maintenance department or similar full-time personnel at the place of purchase.,so as to avoid adverse consequences

Do not use the machine outdoors when it is raining,and store the machine in a dry place indoors when no tin use.

The machine must not be used on the power cord,otherwise it will be dangerous; please unplug the power plug before maintenance and cleaning.

When washing the carpet, it is necessary to wet the carpet with water or a detergent solution to reduce the resistance of the carpet to the brushing machine.

Chapter 4 After-sale service policy

Warranty content

Type	Warranty	Warranty period
Motor	Motor	One year
Consumables	Switch,outlet valve,slide lock clip	No warranty
Consumables	Set of brushes	No warranty